

4. Operation

With a fully set up unit (as described in Chapter 3, *Installation* the 72V VDSL Adapter will be ready to be switched on.



Note

To operate the Gemini unit the PC must be running either the Gemini software or Seanet Pro. Further details can be found within one of the following manuals: 0685-SOM-00001; 0695-SOM-00006.

The LEDs on top of the 72V VDSL Adapter help indicate the status of the unit as well as the state of communications to the attached Gemini unit.



When the unit is first powered on, the **Power** LED will illuminate.

