TECHNICAL MANUAL

INTERMEDIATE AND DEPOT MAINTENANCE WITH ILLUSTRATED PARTS BREAKDOWN

SIDEWINDER MISSILE SYSTEM SHIPPING AND STORAGE CONTAINERS ALL MKS AND MODS

This manual supersedes NAVAIR 11-75-64 dated 1 April 2007

<u>DISTRIBUTION STATEMENT C</u>. Distribution authorized to U.S. Government agencies only and their contractors to protect publications required for official use or for administrative or operational purposes only, determined on 1 July 2008. Other requests for this document shall be referred to Commander, Naval Air Systems Command (PMA-259), RADM William A Moffett Bldg, 47123 Buse Rd, Bldg 2272, Patuxent River, MD 20670-1547.

<u>DESTRUCTION NOTICE</u> - For unclassified, limited documents, destroy by any method that will prevent disclosure of contents or reconstruction of the document.

Published by Direction of the Commander, Naval Air Systems Command