

TABLE OF CONTENTS

1	System Overview	1-1
	INTENDED FUNCTION	1-2
	FUNCTIONAL OVERVIEW	1-5
	BASIC CONCEPTS	1-7
	Page Function Keys	1-7
	Line Select Keys	1-7
	Right Knob Labeling	1-8
	Color Philosophy	1-8
	GENERAL HELIOS OPERATIONS	1-10
	Helios Bezel Layout	1-10
	Power Control	1-12
	Brightness Controls	1-14
	Start-Up Sequence	1-15
	Database Currency States	1-18
	Page Layout and Formats	1-20
	Com-Nav	1-22
	Frequency List	1-29
	Transponder Control and Display	1-31
	Direct-To Operations	1-34
	Function Keys	1-36
	Special Keyboard Keys	1-37
	Touch Screen	1-38
	Use of External Bluetooth Keyboard	1-42
	Dual Helios Operations	1-43
	Wifi (Network) Operations	1-47
	WAAS vs Non-WAAS Operations	1-49
	Interaction With External Devices	1-50
	Before Takeoff Techniques	1-50
2	SVS Subsystem	2-1
3	FMS Subsystem	3-1
	FPL (FLIGHT PLAN) TAB	3-2
	FMS Basic Concepts	3-2
	Creating a New Flight Plan	3-4
	Previewing Flight Plans	3-6
	Selecting a Departure	3-9
	Inserting A Waypoint	3-12
	Inserting an Airway	3-13
	Deleting A Waypoint	3-15
	Editing A Waypoint	3-16
	Adding Altitude Constraints	3-16

Entering And Intercepting A Radial.....	3-17
Deleting A Flight Plan	3-18
Creating A Holding Pattern	3-18
Circular Orbits	3-20
Deleting A Holding Pattern.....	3-23
Editing A Holding Pattern.....	3-24
Activating a Flight Plan	3-24
Flight Plan Sequencing	3-24
Lateral Offsets.....	3-25
Flight Plan Discontinuities (Gaps).....	3-27
Enroute Descents	3-28
Entering An Arrival and Approach	3-30
Activating A Leg	3-34
Use of the Map FPL Split Page	3-35
Chart Access.....	3-36
INFO TAB	3-38
ROUTE TAB	3-42
Creating A New Route	3-43
Editing a Route	3-43
Naming A Route.....	3-43
Copying A Route.....	3-44
Inverting A Route	3-46
Activating A Route	3-47
Deleting A Route.....	3-48
WPT (USER WAYPOINTS) TAB.....	3-49
Creating A User Waypoint	3-49
Naming A User Waypoint.....	3-50
Deleting A User Waypoint.....	3-50
Designating A User Waypoint As An Airfield	3-50
NRST (NEAREST) TAB.....	3-53
4 Map Subsystem.....	4-1
MAP TAB	4-2
Map Controls.....	4-2
Other Map Features.....	4-6
Fuel Range Rings.....	4-10
Decluttering The Map.....	4-12
Map Panning.....	4-13
Graphical Flight Planning (“Rubber Banding”).....	4-14
Altitude Constraints On Map.....	4-16
Map Information Pop-Up Boxes.....	4-16
Datalink Weather Overlays And Operations	4-18
Datalink Radar	4-20
Weather Overlays On Map	4-22

TFRs	4-26
Indications Of Data Age	4-27
Weather Radar Selection For Map Overlay	4-28
Terrain.....	4-30
TERRAIN AWARENESS (TA)	4-31
Forward Looking Terrain Alerting (FLTA)	4-33
500' Callout.....	4-36
TERRAIN ALERTING WARNING SYSTEM (TAWS).....	4-37
Premature Descent Alert (PDA).....	4-39
Excessive Descent Rate (EDR).....	4-41
Negative Climb Rate / Altitude Lost After Takeoff	4-42
TAWS Inhibit Control	4-43
TAWS Self-Test	4-43
Degraded Or No TAWS Conditions	4-43
Traffic Display	4-44
SYNTHETIC VISION (SVS) TAB.....	4-52
CHART TAB.....	4-59
Directory List.....	4-59
European Visual Approach, Landing And Area Charts	4-60
Chart Extent Box.....	4-61
Hot Links To Charts	4-62
Chart Views.....	4-63
Taxi Charts/Airport Diagrams.....	4-64
Lighting.....	4-65
Watermarking / Expired Data.....	4-66
Updating Charts	4-66
RADAR TAB	4-67
VIDEO TAB.....	4-74
5 Aux Subsystem	5-1
AUDIO TAB.....	5-2
Volume Control	5-2
Satellite Radio Tuning.....	5-4
Com Presets	5-6
UTIL (UTILITIES) TAB.....	5-8
Timers	5-8
Calculators	5-11
Electronic Checklist.....	5-15
SETUP TAB	5-20
Datablock Setup.....	5-20
Map Setup.....	5-36
FMS Setup	5-38
User Options	5-39
SYS (SYSTEM) TAB.....	5-54

	Fuel Management	5-54
	System Status	5-55
	ALERT TAB	5-66
6	Navigation.....	6-1
	NAV SOURCE KNOB/BUTTON	6-4
	OBS MODE.....	6-8
	VOR COURSE DEPICTION.....	6-12
	ARMED VS ENGAGED/ACTIVE INDICATIONS.....	6-13
	FMS HOOKS	6-14
	COURSE CHANGES AND HOLDS.....	6-17
	AUTO VLOC TUNING	6-18
	TRANSITION ALTITUDES/LEVELS.....	6-19
	NAVIGATION MODE/CDI SCALE CHANGING	6-21
	APPROACH PROCEDURES	6-22
	Automatic mode switching	6-23
	Precision Approaches	6-24
	Non-Precision Approaches	6-25
	Back Course Approaches	6-25
	WAAS Approaches	6-26
	MISSED APPROACH.....	6-30
	RETRY APPROACH.....	6-33
	RNP/RNAV OPERATIONS.....	6-35
	RECOMMENDED ICAO EQUIPMENT CODES.....	6-36
7	General.....	7-1
	CAUTION ADVISORY SYSTEM (CAS) / ALERTS	7-2
	Master Caution Lamps.....	7-2
	Warning-Caution-Advisory Message Bar.....	7-2
	SELF TEST OUTPUT	7-26
	SYSTEM FAILURES.....	7-27
	Power Distribution.....	7-27
	Loss Of Helios.....	7-27
	Loss Of Display.....	7-28
	Loss Of Bezel Controls	7-29
	Loss Of Touchscreen Control.....	7-29
	Loss Of GPS (Dead Reckoning).....	7-30
	Other Anomalies	7-31
	SUBSCRIPTIONS.....	7-32
	NIGHT OPERATIONS	7-33
	Helios DISPLAY BRIGHTNESS	7-33
	Helios Bezel Brightness.....	7-33
	Charts Lighting Scheme.....	7-33
	Display Of Terrain On Map	7-34

HIGH TEMPERATURE OPERATIONS	7-35
COLD TEMPERATURE OPERATIONS	7-36
LOW POWER OPERATIONS	7-37
HIGH POWER OPERATIONS	7-38
USE OF GLOVES	7-39
CHARGING FROM THE USB	7-41
INTEGRATION WITH THE IFD100 MOBILE APP	7-42
DEMO MODE	7-43
DATA TRANSFER TO/FROM EXTERNAL DEVICES	7-46
REGULATORY COMPLIANCE STATEMENTS	7-50
Radio Regulatory Compliance Statements	7-50
Déclaration(s) de conformité réglementaire	7-51
MAINTENANCE MODE	7-52
Starting Maintenance Mode at power up	7-52
Starting Maintenance Mode from Flight Mode	7-52
Exiting Maintenance Mode	7-54
DATABASE UPDATES	7-55
SOFTWARE UPDATES	7-63
DATALOGS DOWNLOAD	7-64
USER DATA BACKUP/RESTORATION PROCEDURE	7-69
Saving User Data	7-69
Reloading Previously Stored User Data	7-70
CONFIGURING WIFI	7-72
Defining WIFI network configurations	7-73
selecting a network configuration	7-76
CONFIGURING WIRED ETHERNET	7-78
Configuring as a Network server	7-78
Configuring as a Network client	7-78
Configuring as a client with a static IP	7-78
PAIRING A BLUETOOTH® KEYBOARD	7-80
Verification of successful pairing	7-85
CLEANING THE DISPLAY	7-88