


#### Aqua Control<sup>®</sup>, Inc.

6A Wolfer Industrial Drive Spring Valley, IL 61362 USA Phone: 800-377-0019

Fax: 815-664-4901 www.aquacontrol.com

# 60 Hz FUSION SERIES INSTRUCTION MANUAL

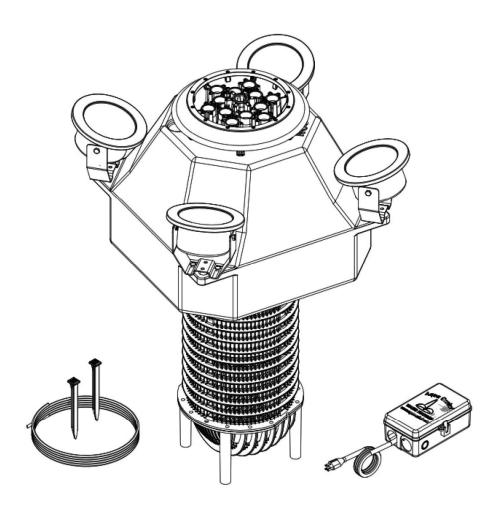

#### **UNIT IDENTIFICATION**

Unit Serial Number:	Distributor:	
Light Cat Carial Normalian	Install Date:	
Light Set Serial Number:	ilistali Date.	

#### **Parts Included**

- Aerating Fountain (1)
- Standard Nozzle Package (1)
- Motor Cord or Quick Disconnect (1)
  - Control Box / Panel (1)
  - Mooring Rope (100')
  - Mooring Stakes (2)

## **Optional Accessories**

- LED Lighting
- Extended Nozzle Package
  - Twister Nozzle Package

### SAFETY INSTRUCTIONS

**IMPORTANT:** Reading and understanding the instructions and warranty disclaimer are necessary prior to product installation and operation.

- Under NO circumstances should anyone enter the water with the electrical equipment plugged in.
- **NEVER** run the unit out of the water. It may damage the motor seals.
- NEVER lift or drag the fountain by the power or light cord.
- Suitable for FRESHWATER applications only.
- The fountain suction screen should be inspected for clogging on a monthly basis. If matted weeds, leaves, or plastic bags are present, remove them with a bristle brush. Failure to keep the suction screen clear of blockages will cause low water flow and may cause premature motor failure. This type of failure is NOT covered under the Aqua Control®, Inc. Manufacturer's Warranty.
- In freezing conditions, the fountain must be removed from the water body and stored in an area above 32°F.
- Neither Aqua Control®, Inc. nor its distributors are liable for electrician's fees incurred for troubleshooting electrical issues.

### **TABLE OF CONTENTS**

Steps to prep Fusion for water 3	Appendix A	10
Nozzle Build	CLUSTER ARCH	
Individual Nozzle Instructions in	<ul> <li>DAFFODIL</li> </ul>	A3
Appendix A	• FLARE	A5
Mooring & Light Installation	• LILY	A7
Wooting & Light installation	<ul> <li>SUPER LILY</li> </ul>	A9
Control Boy Satura	<ul> <li>TORNADO</li></ul>	A11
Control Box Setup 5	<ul> <li>DELMAR</li></ul>	A13
0.5HP – 1HP Timer Programming	<ul> <li>DOUBLE ARCH</li> </ul>	A15
• 1.5HP – 2HP Timer Programming	<ul> <li>DOUBLE ARCH LILY</li> </ul>	A17
	<ul> <li>PENTALATOR</li> </ul>	A19
Fusion Parts List7	<ul> <li>QUAD</li> </ul>	A21
	<ul> <li>SPIDER &amp; ARCH</li> </ul>	A23
Stationary Fusion Parts List 8	<ul> <li>TIARA</li> </ul>	A25
	• TRILLIUM	A27
Troubleshooting Guide 9	<ul> <li>WEEPING WILLOW</li> </ul>	A29
	<ul> <li>Twister Module</li> </ul>	A30