



Esbeeli

Products keyword


[Home](#)
[Wedding](#)
[Special Occasion](#)
[Men](#)
[Bags & Accessories](#)
[Computer](#)
[Luggage](#)


TriTree



TriTree Screen Machine

Average rating : ★★★★★ (0 reviews)

Item Code: TriTree Screen Machine

\$26.00 ~~\$26.00~~

Qty:

Add To Cart



Add to Favorites

Description

Reviews

Shipping & Payment

weight	0.00 g
long	18 Cm
width	15 Cm
high	12 Cm
volume weight	699.23 g

Battery-powered hand-held electric flour sifter for baking

This product is a battery-powered flour sieve. Compared to using a crank or squeeze handle, the method of sifting flour is faster and more convenient. This product uses 2 x AA batteries (not included in the package) to run.

Features:

One-button operation, convenient and quick: The product can be started and closed easily with one button, and it runs at 5600 rpm, which can loosen the flour extremely quickly, which is faster and easier to use than turning a crank or squeezing handle. The ergonomically designed handle is also very easy to hold and comfortable to use.

The screen is removable and easy to clean: the main body of the product can be cleaned directly, and the screen can also be easily removed and cleaned separately. However, the battery compartment cannot be cleaned, and the product cannot be cleaned in water.

Food-grade safe material, BPA-free: The body and handle of the product are made of food-grade polycarbonate, and the screen is made of stainless steel.

Large capacity: 4 cups / 32 ounces / 1 liter

specification:

Power supply: AA battery x 2

Speed: 5600 rpm

Capacity: 4 cups / 1 liter



Dimensions: 6.2 inches x 6.0 inches x 4.8 inches / 18.7 x 15.2 x 12.3 cm

Diameter: 5.5 inches / 14 cm

packing list:

Electric screen x 1, without battery.

how to use:

Carefully unpack the product;

Turn over the screen to ensure that the screen is installed correctly and tighten the firm screws;

Open the battery box, insert 2 AA batteries, then replace the lid and seal it properly.

Pour flour into the sieve and hold the handle horizontally and steadily.

Press the button on the handle to start the flour sieve, press again to close.

Battery description:

Only use batteries of the same or equivalent type as recommended;

The battery should be inserted according to the correct polarity;

Do not mix different types of batteries or old and new batteries;

Depleted batteries should be removed from the objects, do not throw the batteries into fire or trash.

Maintenance and warning:

After each use, remove the screen for cleaning. Only wipe dry with a towel before reconnecting;

The main body of the flour sieve can be cleaned directly, but do not wash your hands or immerse the battery box in water;

This product is not a toy, please keep it out of reach of children;

Keep children away from packaging materials to avoid the danger of suffocation.



TriTree



Product Review

Average Rating: ★★★★★ 0 based on 0 Customer Reviews

- 5 stars 0%
- 4 stars 0%
- 3 stars 0%
- 2 stars 0%
- 1 stars 0%

[Write a Customer Review](#)

 
[View All Review\(0\)](#)

Payment Methods:

FECSHOP.com accepts PayPal, Credit Card, Western Union and Wire Transfer as secure payment methods:

Global:

1. PayPal



- 1) Login To Your Account or use Credit Card Express.
- 2) Enter your Card Details, the order will be shipped to your PayPal address. And click "Submit".
- 3) Your Payment will be processed and a receipt will be sent to your email inbox.

2. Credit Card



- 1) Choose your shipping address OR create a new one.
- 2) Enter your Card Details and click "Submit".
- 3) Your Payment will be processed and a receipt will be sent to your email inbox.



FOLLOW US

Follow us in social media



NEWSLETTER

Sign up for newsletter

Copyright Notice ©2016 Esbeeli Shop .com All rights reserved.

