


DVD Dockable Family
Entertainment System

FES

OWNER'S MANUAL

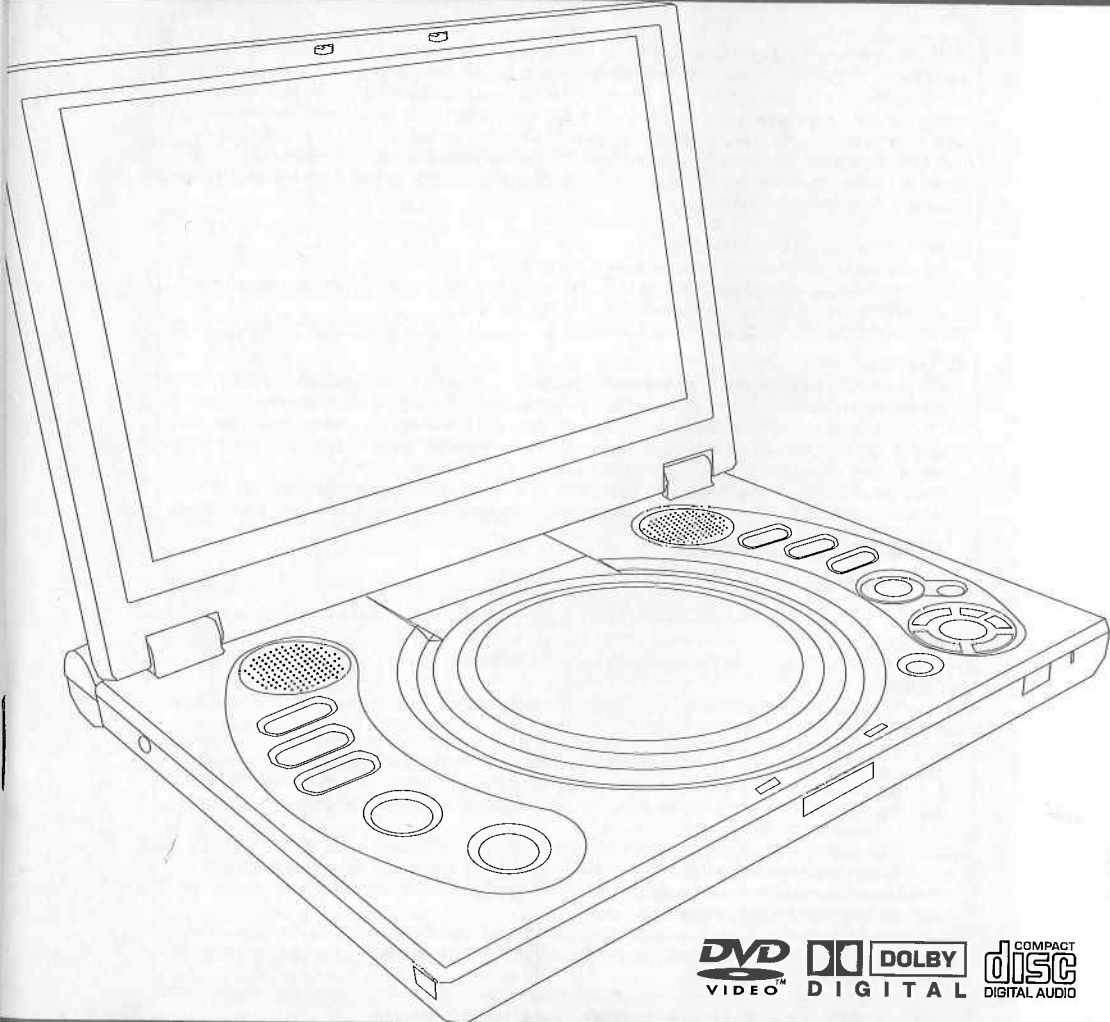

DVD VIDEO™ **DOLBY** DIGITAL **COMPACT disc** DIGITAL AUDIO

Direct Search (GO TO)

This function is used to go to the title, chapter, track or song of the disc you want.

For DVDs:

1. Press the GO TO button during playback.
2. To search title or chapter, move cursor to Title or Chapter using direction buttons, press ENTER button.
3. Input numbers you want to goto using numeric keys, jump to the title or chapter you inputted.
And you can select options (e.g. Audio, Subtitles, Angle, Repeat mode).
4. Press GOTO button to exit the goto menu.



NOTE:

Goto function may not work during DISC MENU or Warning screen playback.

For CD-DAs:

1. Press the GO TO button during playback.
2. Toggle total playtime, track time or track by pushing goto button.
3. Press numeric button to input numbers you wish to goto.
4. Selected track shall be started.



For MP3s:

1. Press the GOTO button during playback.
2. Can go to track time or track by pushing goto button.
3. Press numeric button to input numbers you wish to goto.
4. Selected track shall be started.



NOTE:

Once the initial settings have been completed, the player can always be operated under the same conditions whenever the power is switched on.

These settings are called SETUP data that are easily modified and stored using the SETUP menu.


The SETUP menu includes the information for GENERAL, VIDEO, AUDIO and PREFERENCES system controls.

Password Setup

PASSWORD MODE

On

1. Select "On" using direction buttons on remote control to set up password.
2. Input 4 digits, enter "OK". Using numeric buttons on remote control.

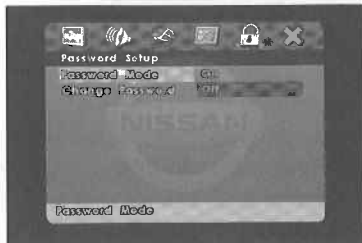

Off

Change password

1. Select "Change Password" using direction buttons on remote control, press ENTER button to select "Change".
2. Enter old password, new password and re-enter new password to confirm.
3. Move to OK, then press ENTER button.



NOTE:

- Do not forget the password (you may want to write it down and keep it in a safe place).
- The setting cannot be changed without inputting the correct password.