

OPERATION—MUSIC PLAYBACK MODE (CONTINUED)




USING THE djMix FEATURE

 
 
 

 

 
1




2



Turn the unit on and access the main menu as described on page 34. Select MyDJ using the Navigation Down button , followed by the Enter/Play/Pause  button .

Scroll to djMix using the Navigation Up  and/or Down  buttons, followed by the Enter/Play/Pause  button  to select it. The player will enter djMix Browse mode. Follow the Browse Music (All Songs, Albums, Artists) instructions on page 38 to select a desired track. Press the Enter/Play/Pause  button  (or the Navigation Right/Skip-Search  button) and djMix will create a playlist based on that song.

NOTES:

- **IMPORTANT!:** The unit must have at least 25 MyDJ ready songs for the MyDJ functions to work.
- Maximum 20 songs will be placed into the MyDJ playlists.
- **djMix Mode:** You can also press the MyDJ button, with a MyDJ ready song playing or selected, to create a djMix.
- For MyDJ information, enter the MyDJ menu as directed in Step 1, scroll to About MyDJ using the Navigation Up and/or Down buttons, followed by the Enter/Play/Pause  button to select it.