


# **ROLL-UP COVERS WITH CANISTER - RIGHT HAND**


## DANGER:


#### Roll-up cover mechanism is spring loaded.

Extreme caution must be taken to avoid injury to yourself or to others. Always release tension and spring energy slowly. Read and understand all steps before proceeding. We suggest that two people work on spring mechanism to avoid problems.

## ADJUSTING THE SPRING PRELOAD:

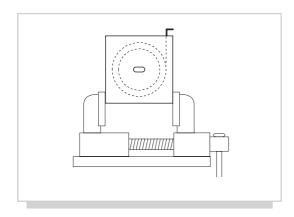

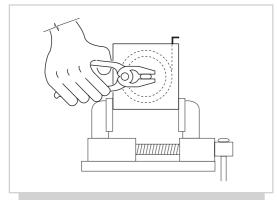

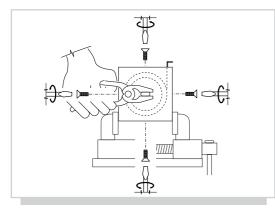

## NOTE:

Factory Recommended Number of Preload Turns for this Roll-up. FIG. A)

Secure the canister leaving the key side accessible.

#### FIG. B)

Place vice-grips style wrench on KEY and clamp securely.

### FIG. C)


Carefully remove screws from KEY side end plate. Caution - **you must hold wrench securely** - end plate is spring loaded.

PRELOAD TURNS......TO.....TURNS

# RUCCD-IN(1)



Via Torretta 32/32-2 • Calderara di Reno (BO) • ITALY Tel. ++39 - 051/6464811 (r.a.) - Fax ++39 - 051/6464840 www.pei.it info@pei.it

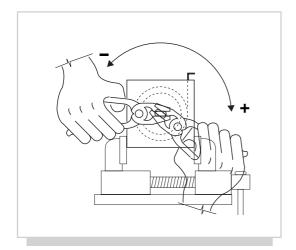

#### FIG. D)

With vise-grips style wrench, turn key and end plate together Clockwise when viewed from key end to add preload. Turn key Counter-Clockwise to reduce preload tension.

Count the turns and preload to factory recommended number of turns.

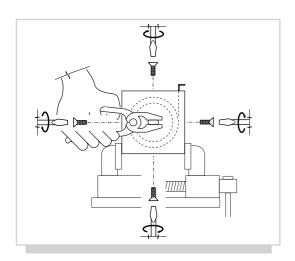


FIG. E)

Hold the key fixed and remount key end plate to canister.

