




AIR BLEED

**WARNING**

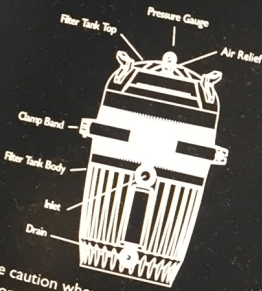

...es under high pressure. Take caution when servicing any part of the  
Air can enter the circulation system and pressurize a filter vessel.  
cause the lid to blow off which can result in severe injury, death  
To avoid serious injury follow the instruction within the owner's  
al during service and start up.

**DO NOT LOOSEN CLAMP BAND BEFORE ATTEMPTING ANY SERVICE WORK.**



**J-CQ420**

Model	Sq.Ft	GPM	Height	Width	Wall Clearance
J-CQ420	420	185	30.9"	23.1"	10"

**CARTRIDGE FILTER**

**PRODUCT INSTRUCTIONS:**

1. Turn pump off - close valves on the suction and return lines.
2. Open the air bleed valve on the lid.
3. Drain water from filter.
4. Loosen Clamp Band around center of filter.
5. Remove top manifold assembly.
6. Lift out cartridges - carefully locating them onto the bottom.
7. Replace the cartridges - carefully locating them onto the bottom.
8. Clean the body 'o' ring and filter body around 'o' ring location.
9. Replace top manifold, fit top half of filter and press firmly into.
10. Ensure 'o' ring is correctly located. Tighten the clamp band.
11. Open the valves - start the pump and bleed all air from filter.

**WARNING: DO NOT LOOSEN CLAMP BAND WHILE OPERATING.**