

 **FlowSafe**
Stable Vortex® II Fume Hood

FlowSafe Fume Hood

OFF SERVICE

ON

-
-
-
-
-

Electrical outlets

ATLANTIC

-
-
-
-
-

Electrical outlets

STABLE VORTEX® FUME HOOD

OPERATION & MAINTENANCE

MANUAL

4366 SHACKLEFORD ROAD
SUITE B
NORCROSS, GA 30093

PHONE: (770) 242-1922

FAX: (770) 242-1944

EMAIL: CUSTOMERSERVICE@FLOWSAFE.NET

TABLE OF CONTENTS

- I. Introduction**

- II. Uncrating and Installing the Fume Hood**

- III. Electrical Specifications**

- IV. Flow Safe Operation Recommendations**

- V. General Fume Hood Maintenance**

- VI Fume Hood Certification and Testing**

- VII. Troubleshooting**

- VIII. Start-Up and Calibration**

- IX. Flow Safe Warranty Information**