





ZUMA[®]



WARNING

Your whirlpool bathtub has been water tested and hand detailed to meet our high quality standards prior to shipping. Due to the possible rough handling during shipping or on the job site, **DO NOT INSTALL THIS PRODUCT UNTIL A THOROUGH INSPECTION AND WATER TEST HAS BEEN COMPLETED.**

INSPECTION AND TEST PROCEDURE

1. Check bathtub for correct model, size and color.
2. Carefully inspect the tub for any damage (i.e., chips, scratches, cracks).
3. Fill tub with water 2" above the highest jet and operate pump for 2-3 minutes.
4. Carefully check for leaks while pump is running.
5. Allow water to stand in tub for at least 10 minutes and check for leaks again.
6. Drain bathtub and wipe up excess water with a soft sponge.
7. Perform final inspection for damage.

If no leaks or damage are present, proceed with the installation as described in our Owners and Operator manual.

If at any point during the pre-installation inspection and water test, you discover a problem with the bathtub or piping system, **DO NOT INSTALL** the unit and contact us immediately.