



**GLOBAL
SUPPLIERS
OF
TURBINE
AND
COMPRESSOR
CONTROL
SYSTEMS**

TrainTools **Product Overview and Maintenance Guide**

Publication UM5500 (15.2.0)

System Release: 15.2

July 2020

Documentation Feedback Form

COMPRESSOR CONTROLS CORPORATION

Des Moines, Iowa, U.S.A.

Phone: (515) 270-0857

Web: www.cccglobal.com

© 2000-2020, Compressor Controls Corporation. All rights reserved.

This manual is for the use of Compressor Controls Corporation and is not to be reproduced or redistributed without written permission.

Air Miser, Guardian, Prodigy, Recycle Trip, Reliant, Safety On, SureLink, TTC, Total Train Control, TrainTools, TrainView, TrainWare, Vanguard, Vantage, Vibrant, WOIS, and the TTC and impeller logos are registered trademarks; and COMMAND, TrainPanel, Series 3++ and Series 5 logos, CCC Inside, and CCC Pro Built are trademarks of Compressor Controls Corporation. Other company and product names used in this manual are trademarks or registered trademarks of their respective holders.

The purpose of this document is only to describe how to use CCC's products. It is not sufficiently detailed to enable outside parties to duplicate or simulate their operation. CCC reserves the right to alter the designs or specifications of its products at any time and without notice.

Disclaimer: This manual may be translated into another language for those not fluent in the English language. The English language original shall prevail for all technical and legal purposes.

KEY INDICATORS

Attention may be drawn throughout this to information of special importance by using the following key indicators:

Note: Notes contain important information that needs to be emphasized.

Caution: Cautions contain instructions that, if not followed, could lead to irreversible damage to equipment or loss of data.

Warning! Warnings contain instructions that, if not followed, could lead to personal injury.



The appearance of this electrical hazard warning symbol on CCC equipment or the word **Warning** appearing in this document indicates dangerously-high voltages are present inside its enclosure. To reduce the risk of fire or electrical shock, do not open the enclosure or attempt to access areas where you are not instructed to do so. Refer all servicing to qualified service personnel.



The appearance of this user caution symbol on CCC equipment or the word **Caution** appearing in this document indicates damage to the equipment or injury to the operator could occur if operational procedures are not followed. To reduce such risks, follow all procedures or steps as instructed.

Table of Contents

	Table of Contents	3
	List of Figures	6
	List of Tables	7
Chapter 1	TrainTools Product Overview	8
	TrainTools Installation Packages	8
Chapter 2	Platform Communication and Archive Server Packages	10
	Introduction	10
	Communication Protocols	11
	Alarm and Event Messaging	12
	Archival Data Access	13
	Platform Communication Package	14
	Connection Limitations	14
	OPC/DA Servers	15
	CCC OPC Server	15
	Series 5 OPC Server	15
	Series 4 OPC Server	15
	Series 3 OPC Server	15
	Modbus Master OPC Servers	16
	Script Engine OPC Servers	16
	TrainTools OPC AE Server	16
	TrainTools AE Servers	16
	CCC OPC AE and Series 5 AE Servers	16
	Generic Controller AE Server	16
	Script Engine AE Server	16
	Script Engine Program	17
	Modbus Slave OPC Client	17
	Archive Server Package	18
	Archival Data Manager	19
	Tagged Data Channels	19
	Default Archiving Duration Settings	20
	Critical Event Files	20
	ArcCom Program	20
	Database Space Requirements	21
Chapter 3	Operator Interface Packages	22
	TrainView Introduction	22
	Archival Data Viewer Programs Introduction	23
	ActiveX Controls Introduction	24
	Alarms Control	25
	Events Control	25
	Trends Control	25
	Map Controls	26
	IOView Control	27
	TrainView Package	28

	TrainView Screens	29
	Controller Faceplates	29
	Standard TrainView Templates Library	30
	Archive Reporter Program	31
	Reporter Agent Program	31
	Archive Viewer Program	32
	Archive Exporter Program	32
Chapter 4	TrainTools Web Package	33
	Introduction	33
	WebGateway Versus WebAccess	34
	WebServices (TTWS) Introduction	35
	WebServices (TTWS) Client Limits	36
	Auto / Test Method (with a project loaded)	36
	Manual Method (before a project is loaded)	37
	WebGateway (TTWG) Introduction	39
	TrainViewWeb Introduction	40
	TVWeb Client PC Connection Limits	40
Chapter 5	Engineering Utilities Package	41
	Introduction	41
Chapter 6	Project Engineering Package	42
	Control System Engineering	43
	Project Engineering Programs	44
	Project Unzip Utility	44
	Project Security	45
	Project Database Elements	45
Chapter 7	Series 5 Emulator Package	46
	Introduction	46
	Functional Diagram of an Emulated Controller Instance	47
Appendix A	Installing TrainTools and Starting the TrainTools Programs	48
	Installing TrainTools	48
	Starting TrainTools Programs	49
	Windows Accounts (Required to Run the TrainTools Programs)	49
	Starting TrainView (from Project Builder)	50
	Starting TrainView (as an IE Web Page)	50
	Starting TrainView (Startup Logon)	50
	Auto-Start TrainView and ArcCom from Windows Start Menu	51
	Running ArcCom as a Windows Service	52
	Series 3++/Plus Limitations	54
	Switching Between CCC OPC and S3 OPC Server (for Maintenance)	54
	Windows Firewall Settings for TTWS-Service	56
	Running TTWS as a Windows Service	61
	Running the TTWS Service and Client Applications with Series 5 Vanguard Instead of using OPC Server	63
	Running CCC Configurator on the Client PC	63

	Running the TrainTools HMI on the Client PC	64
	Command Arguments	67
	ArcCom Program	67
	TrainView Program.	67
	Archive Reporter Program	67
	Edit Layout	68
	Run Report	68
	View Report	68
	Reporter Agent Program	69
	Modbus Slave Program	69
Appendix B	TrainTools Maintenance	70
	TrainTools Information Utility	71
	General Tab	71
	Modules Tab.	71
	License Tab	72
	TrainTools Software Update	72
	TrainTools License Update	72
	TrainTools TroubleShooting Guide	73
	Verification of Python Execution.	73
Appendix C	TrainTools Security Features	74
	TrainTools Security	75
	Controller Security	75
	TrainTools Administrator	76
	Create the Accounts Database	77
	Modify the Accounts Database.	77
	Change a User's Access Level.	78
	Change a User's Password	78
	Role-Based Access Control	79
Appendix D	TrainTools Problem Report Checklist.	81
	Detailed Description	81
	Controller Identification	81
	Contact Information	81
	Estimate of Problem Severity	82
	Current Project Specific Data	82
	Revision History	84
	Index	94

List of Figures

Figure 1-1	TrainTools Components and Communication Paths	8
Figure 2-1	Data Flow for Standard TrainView HMI Pictures	10
Figure 2-2	Master-Slave and Client-Server Communication Protocols	11
Figure 2-3	TrainTools Alarm and Event Communication	12
Figure 2-4	TrainTools Archival Data Communication	13
Figure 2-5	TrainTools Data Communication	14
Figure 2-6	TrainTools OPC Gateways	15
Figure 2-7	TrainTools Alarm and Event Servers	16
Figure 2-8	TrainTools Script Engine Communication	17
Figure 2-9	Modbus Master Access to Series 5 OPC Data	17
Figure 2-10	TrainTools Archival Data Programs	18
Figure 2-11	Archiving Duration Default Settings Defined in ADaM Properties	19
Figure 3-1	Monitoring a Turbocompressor from a TrainView PC	22
Figure 3-2	Archival Data Utility Programs	23
Figure 3-3	Data Sources for TrainTools ActiveX Controls	24
Figure 3-4	Alarms ActiveX Control	25
Figure 3-5	Events ActiveX Control	25
Figure 3-6	Trends ActiveX Control	25
Figure 3-7	Map Control Displaying Compressor Surge Limit	26
Figure 3-8	Map Control Displaying a Gas Turbine Limit	26
Figure 3-9	IOView ActiveX Control	27
Figure 3-10	TrainView HMI Run-Time Components	28
Figure 3-11	Typical Control System Process and Instrumentation Screen	29
Figure 3-12	Typical Controller Faceplate Components	30
Figure 3-13	Data Flow for Standard Trends and Events Controls	32
Figure 4-1	TrainTools Web Programs and Services	33
Figure 4-2	Networked PC Communication Options	34
Figure 4-3	WebServices Program Components	35
Figure 4-4	TTWS Main Window Showing the Number of Connections	36
Figure 4-5	Number of Processor Cores in Task Manager Performance Tab	37
Figure 4-6	WebGateway Program Components	39
Figure 4-7	WebGateway Program Components	40
Figure 5-1	TrainTools Field Engineering Utilities	41
Figure 6-1	TrainTools Project Engineering Utilities	42
Figure 6-2	Series 5 Control System Training and Testing	42
Figure 6-3	Simplified Diagram of Control System Data Flow	43
Figure 6-4	TrainTools Project Engineering Environment	44
Figure 6-5	Project Database Elements	45
Figure 6-6	Control System Resource Elements	45
Figure 7-1	Series 5 Controller Emulation	46
Figure 7-2	Functional Diagram of an Emulated Controller Instance	47
Figure A-1	TTCR Installation	48
Figure A-2	TrainView Settings - Startup Logon Option	50
Figure A-3	TrainTools Program Startup Shortcut Menu	51
Figure A-4	TrainTools Program Startup Configuration Screen	51

Figure A-5	Install/Configure ArcCom to Run as Windows Services	52
Figure A-6	Enter Project Path and PC Number	52
Figure A-7	How to Determine the PC Number.	53
Figure A-8	ArcCom Service is Running	53
Figure A-9	ArcCom Running as Windows Service	54
Figure A-10	Stopping the ArcCom Service	54
Figure A-11	Verify CCC ArcCom, CCC Adam, CCC OPC Services Stopped	55
Figure A-12	Restarting the ArcCom Service	55
Figure A-13	Select Windows Defender Firewall	56
Figure A-14	Select Advance Settings	56
Figure A-15	Copy the TrainTools TTWS Inbound Rule	57
Figure A-16	Paste the TrainTools TTWS Inbound Rule - will be placed at top . . .	57
Figure A-17	Open the Properties for the new TrainTools TTWS Inbound Rule. . .	58
Figure A-18	Click on Programs and Services and Browse to the new Program . .	58
Figure A-19	Navigate to, Select, and Open the new TTWS-Service Program . . .	59
Figure A-20	Verify the new Program is Selected then Change its Name	59
Figure A-21	New Name for the TrainTools TTWS Service Inbound Rule	60
Figure A-22	Services Window	61
Figure A-23	Configuring TTWS to Run as a Windows Service	62
Figure B-1	TrainTools Information Window	70
Figure B-2	General Tab on the TrainTools Information Window	71
Figure B-3	Modules Tab on the TrainTools Information Window.	71
Figure B-4	License Tab on the TrainTools Information Window	72
Figure B-5	Checking for a Python Issue	73
Figure B-6	Uncheck "Run the program as an administrator"	73
Figure C-1	TrainTools Administrator Window	76

List of Tables

Table R-1	User Manual Revision and TTCR System Releases	84
-----------	---	----