





**USAGE METHOD**

Align the syringe and the reactor wash inlet and inject warm water (warm water has better effect on dissolving pipe sticky matter). (Note: there is water coming out of the foam outlet, please 2-3 times, and the effects better.)

**Note:** Needle barrel is not included in package

 <p>1. Inject the water into the reactor wash inlet to open the main channel.</p>	 <p>2. Inject the water in the correct position.</p>
 <p>3. If the foam outlet is not open, please check the position.</p>	 <p>4. If the foam outlet is not open, please check the position.</p>





