

Bornoble
Safe,Durable,Simple and Noble!

Cooling Plate

Instruction Manual



This manual applies to Bornoble models:
BNLB-1/2 BNLB-1/1 BNLB-4/3

Ningbo Bornoble Catering Equipment Technology Co.,Ltd.
NO.138 Dongjiang Road, Jiangkou Street, Fenghua District,
Ningbo City, Zhejiang Province, P.R.China, 315500

TEL: +86-574-88927818 E-mail: jasmine@bornoble.com
Website: www.bornoble.com

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this appliance will provide the best possible performance from your product.

Pack Contents

The following is included:

- Cooling Plate
- Instruction Manual

On quality and service, it is ensuring that at the time of packaging the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your dealer immediately.

Function and Feature

1. This equipment is designed to help keep cold foods cold in an indirect cooling way.
2. Using the Technology Ice with the longest holding time as the refrigerant.
3. Using 18-8 Stainless Steel totally, Safe and Nontoxic.
4. Recyclable, Reusable, and Environment-friendly.
5. The lower the freezing point, the longer the cool storage time and the cooling time.

Before First Use

Wash the plate. See Cleaning, Care & Maintenance.

Operation

1. Before use, place the cooling plate into the freezer.
2. Set the freezer temperature at -0.4°F (-18°C) to -4°F (-20°C), and keep it for more than 6 hours.
3. Remove the plate from the freezer.
4. Place chilled food or containers of chilled food onto the plate.
5. Regularly check the temperature of the food.



WARNING:

Monitor food temperature closely for food safety.

The United States Public Health Service recommends that cold food/beverage be held at a maximum of 41 °F (5 °C) to help prevent bacteria growth.

Cleaning, Care & Maintenance

**NOTE:**

Not dishwasher safe. Hand wash only. Do not submerge in liquid.

Do not use abrasive materials, scratching cleansers or scouring pad. These can damage the finish.

To maintain the appearance and increase the service life, clean your cooling plate daily.

- Wipe the plate with a soft cloth and solution of mild detergent and warm water.
- Dry the plate thoroughly.

Specifications

Model	Freezing Temperature	Dimensions W x D x H IN	Net Weight LBS
BNLB-1/2	10.4°F (-12°C)	10.43 x 12.80 x 1.80	6.3
BNLB-1/1	10.4°F (-12°C)	12.80 x 20.87 x 1.80	13.0
BNLB-4/3	10.4°F (-12°C)	12.80 x 27.95 x 1.80	17.0

Service and Warranty

This equipment is warranted to the original user against defects in workmanship or material under normal use for **One Year** from the date of sales.

1. If there are defects **within three days** of sales (subject to customer's receipt of the equipment), company will provide free return, replacement or repair service.
2. During the warranty period, company will provide free repair service to the original equipment.
3. During the warranty period, company will provide replacement if there are excessive repair records.

Bornoble

Safe, Durable, Simple and Noble!

All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Bornoble .

Every effort is made to ensure all details are correct at the time of going to press, however, Bornoble reserve the right to change specifications without notice.