Service and Warranty

This equipment is warranted to the original user against defects in workmanship or material under normal use for **One Year** from the date of sales

- If there are defects within three days of sales (subject to customer's receipt of the equipment), company will provide free return, replacement or repair service.
- 2. During the warranty period, company will provide free repair service to the original equipment.
- 3. During the warranty period, company will provide replacement if there are excessive repair records.




Electric Food Warmer Instruction Manual

Ningbo Bornoble Catering Equipment Technology Co.,Ltd.

No.138 Dongjiang Road, Jiangkou Street, Fenghua District, Ningbo City, Zhejiang Province, P.R.China, 315500

TEL: +86-574-88927818 E-mail: jasmine@bornoble.com

Website: www.bornoble.com

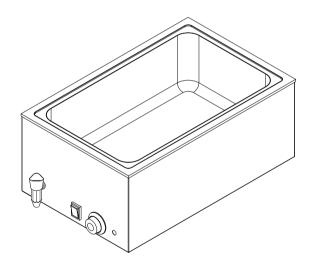

This manual applies to Bornoble models: **BNKC-5737C0 BNKC-5737C0T**



All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of **Bornoble**.

Every effort is made to ensure all details are correct at the time of going to press, however, **Bornoble** reserve the right to change specifications without notice.

Safety Tips

- · Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- DO NOT immerse the appliance in water, or use jet/pressure washers to clean it.
- DO NOT touch hot surfaces with bare hands. Always use the handles/protective gloves.
- DO NOT overfill the appliance. Keep the water level below the 'MAX' level.
- DO NOT allow the water level to drop below the 'MIN' level during operation.
- DO NOT move the appliance when it contains hot liquid.
- DO NOT use the appliance for anything other than its intended use.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Not suitable for outdoor use.
- Keep all packaging away from children. Dispose of the packaing in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by an agent or a recommended qualified technician in order to avoid a hazard.

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this appliance will provide the best possible performance from your product.

Pack Contents

The following is included:

- Food Warmer
- Instruction Manual

On quality and service, it is ensuring that at the time of packaging the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your dealer immediately.

Operation

- 1. Connect the appliance to the power supply.
- 2. Fill the tank with water to a level between the 'MIN' and 'MAX' marks on the inside of the tank.
- Switch the rocker switch to the On position [I]. The rocker switch light will turn on.
- 4. Turn the thermostat to the desired temperature to heat-up the appliance.
- Once the appliance has heated the water, the pilot light turns off.
- 6. Reduce the heat setting on the thermostat to maintain temperature.
- MARNING: Do not allow the water to drop below the 'MIN' level during operation. Severe damage to the heating element could result.

Maintaining Water Levels

It is important to regularly check the water level in the Food Warmer tank.

- Always keep the water level above the 'MIN' mark on the inside of the tank during operation.
- Damage to the heating element can occur if the tank boils dry and the element may have to be replaced.
- This is not covered by the warranty.

Emptying the Appliance

BNKC-5737C0 – Use a suitable container to remove the water from the appliance.

BNKC-5737C0T – Turn on the tap to drain the water. Ensure a suitable container is used to collect the water.

Cleaning, Care & Maintenance

- Wipe down the exterior of the appliance with a damp cloth.
- Some cleaning agents may cause damage when used for a prolonged period on stainless steel. Use a suitable stainless steel cleaner.
- Dry the exterior thoroughly.
- Wash all removable parts in warm, soapy water.

Troubleshooting

If your appliance develops a fault, please check the following table before making a call to the Helpline.

Fault	Probable Cause	Action	
The unit is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on	
	Plug and lead are damaged	Call agent or qualified technician	
	Fuse in the plug has blown	Replace the plug fuse	
	Power supply	Check power supply	
	Internal wiring fault	Call agent or qualified technician	
	The thermostat has not been set correctly	Set the thermostat to a higher temperature	
	The heating element has failed	Call agent or qualified technician	

Technical Specifications

Model	Voltage	Power	Current	Dimensions W x D x H	Net Weight
BNKC- 5737C0	120V	1200W	10A	14.57 x 22.56 x 9.65 IN	17.64 LBS
BNKC- 5737C0T	120V	1200W	10A	14.57 x 22.56 x 9.65 IN	18.74 LBS

Warning

Electric Shock Hazard: Plug the device properly into a grounded electrical outlet, please check voltage and plug type before plug in. If the plug and socket do not match, qualified electrician should install the proper voltage electrical outlet.

Compliance

The parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

The products have been approved to carry the following symbol:

