


CHROMA™ WALL HAND HOLDS INSTALLATION INSTRUCTIONS:

(Please read all instructions thoroughly before starting to install hand holds.)

- 1. Place hand hold over desired T-nut in Chroma Wall, lining up the hand hold with the hole in the Chroma Wall.
- 2. Insert the appropriate size and type of bolt through the hand hold and into the Chroma Wall.
- 3. Using an Allen Wrench, gently start threading the bolt into the T-nut. (Take care not to cross-thread the T-nuts.)
- 4. If you feel resistance while starting to thread the bolt, immediately stop, remove the bolt and readjust the hand hold and bolt angle.
- 5. When the bolt threads are started properly, continue threading the bolt until it becomes tight, then give another 3/4 of a turn. Do not overtighten hold.

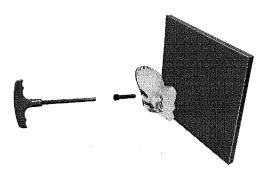

CARE AND MAINTENANCE OF HAND HOLDS

- ✓ Hand holds should be mounted according to installation instructions.
- ✓ Observe hand holds for signs of stress or breakage.
- ✓ Remove and replace any damaged hand holds.
- ✓ Check hand holds for looseness and tighten. Do not overtighten!
- ✓ Inspect climbing routes for unsafe maneuvers. Make sure all routes are reviewed carefully before they are climbed.
- ✓ Wash hand holds periodically to remove oils, stains and other residue. Use mild soap and water and a soft-bristle brush. Do not use a wire bristle brush. You can also wash hand holds in a dishwasher. Towel dry washed holds and then air dry for 24 hours to ensure complete drying.

CLEANING OF CHROMA WALL

- ✓ The Chroma Wall can be wiped clean with a damp cloth and mild detergent.
- ✓ Refer to the included Safety, Care & Maintenance Manual for additional care and maintenance information.



WARNING: THE PROPER CARE AND ONGOING MAINTENANCE OF YOUR CLIMBING WALL, INCLUDING HAND HOLDS, IS ESSENTIAL AND IS YOUR RESPONSIBILITY.