



CHAMPION[®]
Window Coverings & Flooring

Part #: 127428

- 12" x 12" (30.5 cm x 30.5 cm) vinyl flooring tiles in Color 1514
- 45 sq. ft. (4.18 sq. m) coverage
- 45 pieces per box
- Self-adhesive
- 0.05" (1.2 mm) thickness
- 0.003" (0.07 mm) wear layer
- 5 year manufacturer warranty
- Made from minimum of 50% recycled content

Exclusively Distributed By:
HD Supply Facilities Maintenance, Ltd.
Atlanta, GA 30339

To Reorder:

1-800-431-3000
hdsupplysolutions.com

© 2018

Made in China

SELF STICK VINYL TILES IN COLOR 1514

FLOOR PREPARATION:

Before you apply your tiles ensure your substrate is suitable:

- Cured cement flooring
- Tile and slate underlay
- Smooth tongue and groove
- Existing sound PVC and vinyl surfaces

Prepare your substrate:

- Fill any pitted concrete floors with a feather edge of cement filling compound.
- Ensure any uneven surfaces are levelled with a levelling compound to ensure a flat surface.
- Sand floor.
- Vacuum up any dust or residue from preparation process.
- Loose lay tiles on surface to acclimate for at least 24 hour before installation.

Warning - Vinyl tiles are unsuitable for the following substrates:

- Surfaces with high moisture content.
- Concrete slabs less than 3 months old.
- Cracked or delaminated cement floor surfaces.
- Textiles, particle board, unfilled grout tiles, loose worn vinyl surfaces and residues.

PLEASE NOTE: While tiles have undergone stringent testing, due to environmental and porous variability, there are some substrates which can be difficult to adhere vinyl tiles to. Should the tile not adhere, we recommend the use of an additional adhesive using a suitable "V" notched trowel. Check with your flooring consultant as to which adhesive type to use. Due to moisture, the tiles are not suitable for rooms which have a bath or shower installed.

HOW TO FIT YOUR TILES:

Step 1:

Find and mark the two center lines of the room.

Step 2 and 3:


For better adhesion and durability of your vinyl tile floor, it is recommended that you do not lay tiles which have been cut to less than half their original size. If you have laid out your tiles and find that you would need to cut one to less than half size to fit up against the wall, take away one tile at the end of the row. Then re-adjust the row so that both the end tiles are of equal distance from the walls and still parallel to the original center lines. Continue this process until you have reached the outer border.

Step 4, 5, & 6:


Place one loose tile, marked B, exactly on top of the last tile in the row. On top of this tile, place another tile, marked C, and push it completely against the wall. Now make a mark along the tile B using tile C as a ruler. Then cut tile B along the line and you have a border piece that fits exactly into this position. For doorways and difficult corners, it may be easier to make a paper template first.

Step 7:


You are now ready to start laying the tiles. Start from the center line as per Steps 3, 4, 5, 6. After installation use a light roller or similar to help bed the tiles down.

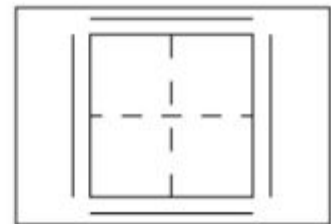


STEP 1

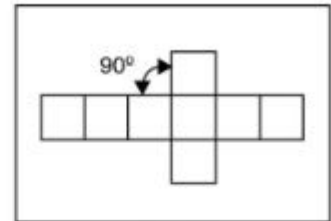


STEP 2

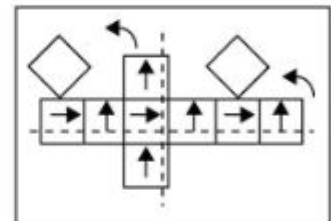


STEP 3

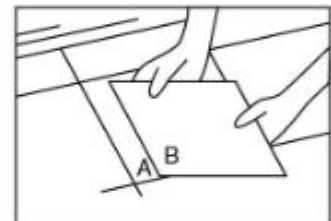

STEP 4

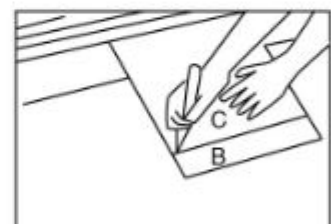

STEP 5

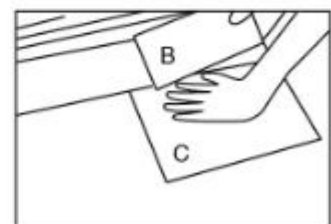

STEP 6



STEP 7

E1
FORMALDEHYDE

DS
SLIPPERINESS

CLASS BFLS1
REACTION TO FIRE

EN14041
HETEROGENEOUS POLYVINYL CHLORIDE
FLOOR COVERINGS FOR USE IN BUILDINGS





Part #: 127428

Self-Adhesive Vinyl Tiles in Color 1514
