

# Aja<sup>TM</sup> Wood Panels


- Transform any wall with Aja Wood Wall Panels
- Handmade strips of natural wood create a truly unique appearance
- Made with eco-friendly sustainable hardwood
- Two easy install methods – adhesive or brad nailer
- Great for accent walls, backsplashes, headboards, or islands

Coverage: 10.83 sq ft (1.000 m<sup>2</sup>)

Panels per Box: 11

Dimensions: 7/8 in x 24 in x 3/8 in - 13/16 in (150 mm x 610 mm x 10 mm - 20 mm)

## DESIGN OPTIONS

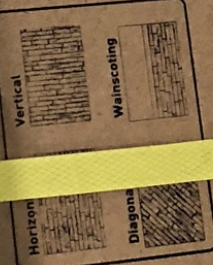

Tools and Materials required: All purpose construction adhesive • Brad nailer and 2" brads • Broom or vacuum • Caulking/gap gun • Chisel • Extension cord • Level or spirit level • Paper • Personal protective equipment • Saw (circular saw, table saw or sander) • Stop marker • Tape measure

## INSTALLATION

The steps below represent a wall installation using the traditional horizontal design option.

**1 ACCLIMATE**

Acclimate the panels for 72 hours at 60°F to 80°F (15°C to 27°C) in a dry environment. Do not remove panels from cartons.

**72 hrs**

**2 THE FIRST PANEL**

Use the panel as a guide to determine the placement of the first panel. The panel should be placed with the grain running vertically.

**3 INSTALLATION METHODS**

**Installation Using Brad Nailer Construction Adhesive**

Apply adhesive to the back of the panel. Press the panel into place. Use a brad nailer to secure the panel to the wall.

**4 INSTALLING THE FIRST ROW**

Install the first row of panels. Use a stop marker to mark the end of the row. Use a level to ensure the row is straight.

**5 INSTALL REMAINING ROWS**

Install the remaining rows of panels. Use a stop marker to mark the end of each row. Use a level to ensure the rows are straight.

## DESIGN OPTIONS



## INSTALLATION

The steps below represent a wall installation using the traditional horizontal design option.

**1 ACCLIMATE**

Acclimate the panels for 72 hours at 60°F to 80°F (15°C to 27°C) in a dry environment. Do not remove panels from cartons.

**72 hrs**

**2 THE FIRST PANEL**

Use the panel as a guide to determine the placement of the first panel. The panel should be placed with the grain running vertically.

**3 INSTALLATION METHODS**

**Installation Using Brad Nailer Construction Adhesive**

Apply adhesive to the back of the panel. Press the panel into place. Use a brad nailer to secure the panel to the wall.

**4 INSTALLING THE FIRST ROW**

Install the first row of panels. Use a stop marker to mark the end of the row. Use a level to ensure the row is straight.

**5 INSTALL REMAINING ROWS**

Install the remaining rows of panels. Use a stop marker to mark the end of each row. Use a level to ensure the rows are straight.

93

PICK TICKET

Aja Wood Panels

Aja Wood Panels