




AMS Vans Legend II

Side-Entry Power Fold-Out Conversion

OPERATIONS MANUAL

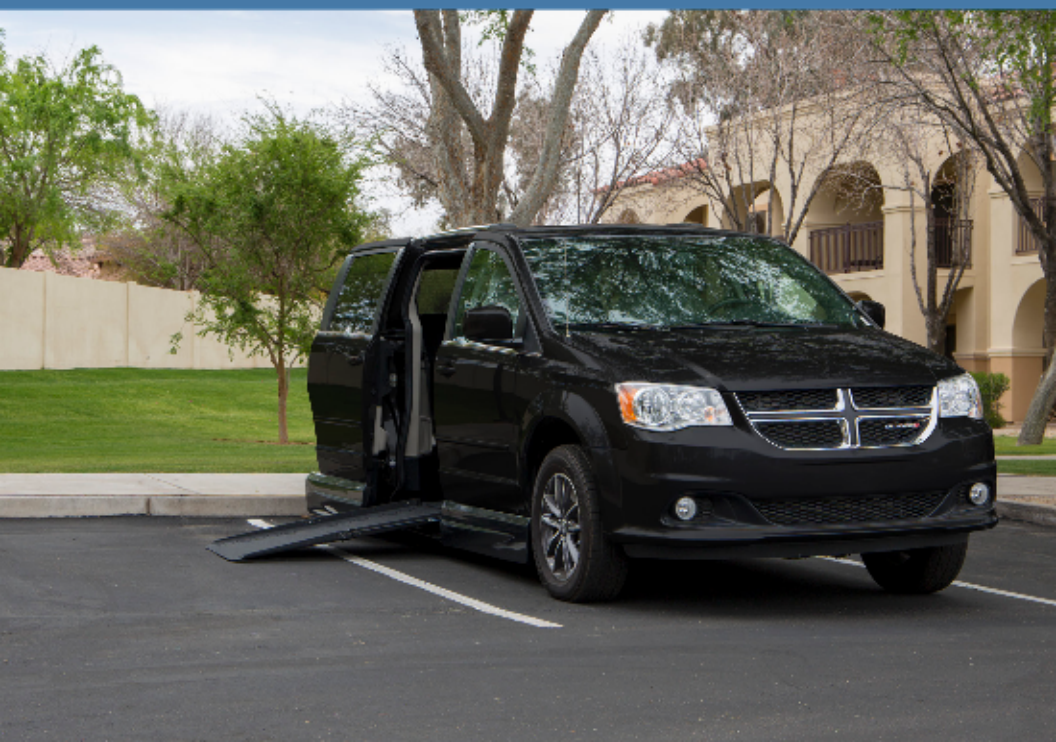

LEGEND II RAMP OPERATION

The Legend II ramp deploys from and stows into an upright folded position by the passenger side sliding door.

Before operating the power door and power ramp, the doors must be unlocked and the vehicle transmission must be in PARK.

Allow approximately 8 feet for the ramp to deploy beyond the side of the vehicle plus an additional 4 feet for the wheelchair occupant to maneuver. You may wish to increase this distance if the wheelchair occupant requires assistance from another person.

WARNING

Before operating the power door and power ramp, make sure the passenger side area of the vehicle is clear and unobstructed.

OPERATING THE RAMP

1. Always make sure the passenger side sliding door is in the "full open position".
2. To deploy the ramp with the interior toggle switch, press down ("OUT") on the switch and hold until the ramp deploy cycle is complete.
3. To stow the ramp with the interior toggle switch, press up ("IN") on the toggle switch and hold until the ramp stow cycle is complete.

NOTE: *If you wish to use the ramp without the kneel feature, simply release the Ramp OUT button after the ramp has finished deploying. This is useful for instances where you may want to deploy the ramp onto a curb.*