

Counting Function

1. Place the scale on a leveled surface and power it on.
2. Sampling: Prepare a sample quantity (25, 50, 75 or 100 pcs) of the item you want to count. Put the items on the platform, press and hold "PCS" until the scales shows "25", "50", "75" or "100". Press "M" to switch the above figures to match the quantity of the items on the platform. Press "PCS" again and the display will show "pcs" in the lower left hand corner. Sampling is completed.
3. Put the items you want to count on the platform and the display will show the quantity of these items.

Warning


1. "Lo": Low voltage. Please replace the batteries.
2. 'O-Ld': Overload. Please remove item quickly to protect the scale.

Saga

Scale

SG series
Jewelry Scale

Readme

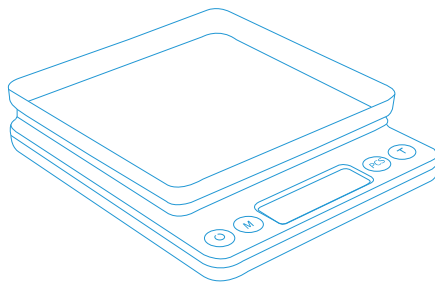

General Maintenance and Care

1. Avoid exposure to extreme heat or cold. Also avoid any kind of moisture. Always allow your scale to acclimate to normal room temperature before use.
2. Keep your scale in a clean and dry environment. Dust, dirt, moisture, vibration, air currents and proximity to other electronic equipment may have an adverse effect on the accuracy and reliability of the scale.
3. Handle the scale with care. Gently apply all items to be weighed on the tray top. Although this scale is designed to be quite durable, avoid rough treatment, as this may permanently damage the internal parts. Always avoid shaking and dropping. This is a precision instrument and should be handled with extreme care.

Specification and Function

Capacity: 2000g/70oz ; 1000g/35oz

Resolution: 0.1g/0.01oz

Units: g, oz, ozt, dwt, ct, gn

Button: TARE, MODE, ON/OFF, PCS

Display: LCD display with blue backlight

Auto off: 60 seconds of inactivity

Power: 2 AAA batteries

Operation Temperature: 10 to 30 deg C

Operation

1. Place the scale on a level surface and press “ON/OFF” to turn on the scale or power it off.
2. Wait until the LCD display shows zero, then press “M” to switch between units of measure.
3. Place the item/s at the center of platform and wait until the reading is stable.

Tare Function

1. Turn on the scale.
2. Place an empty container on the scale, then press “T” then wait until the LCD displays zero.
3. You can drop item/s into the container and measure the net weight of item/s.

Calibration

1. Place the scale on a leveled surface and power it on.
2. Press and hold the “M” until the display reads ‘CAL’, then release the button.
3. Press “M” again and the display will show the required calibration weight.
4. Place the weight at the center of the platform. The LCD display will show “PASS” and then return to normal weighing mode. Remove the weight and turn off the scale.