




Scale

SS series
Bathroom Scale

Readme

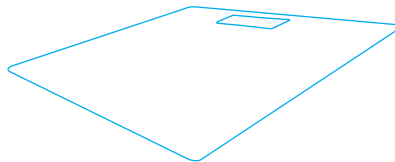

Attention

1. Place the scale on a hard and level surface, don't place the scale on carpets.
2. Always stand in the middle place to avoid slip.
3. Keep your scale in a clean and dry environment. Dust, dirt, moisture, vibration, air currents and proximity to other electronic equipment may have an adverse effect on the accuracy and reliability of the scale, and do not wash it with water.
4. Avoid exposure to extreme heat or cold. Also avoid any kind of moisture. Always allow your scale to acclimate to normal room temperature before use.
5. Do not store the scale in an upright position.

Specification and Function

Capacity: Max 440lb, 200kg

Resolution: 0.2lb or 0.1kg

Units: KG/LB/ST

Auto off: 10 seconds of inactivity

Power: 1 x CR2032battery

Hint of low-battery: "Lo"

Hint of over-load: "Err"

Operation Temperature: 10 to 30 deg C

Operation

After installing the battery, please place the scale on the floor, wait for it to turn off and restart the scale before use.

1. Directly stand on the scale and it will switch on automatically.
2. After switch on, "0" will display.
3. Stand on the scale in balance and start weighing, when the weight is set, the figure will flash and then you can read it.
4. After 10 seconds of inactivity, the scale will switch off.
5. Press "UNIT" at the bottom of the scale, you can switch between units of measure.



6. Replace the battery if the screen displays "Lo".



7. Remove the extra weight and try again if the screen shows "Err".

